




# RCL-85 RCL-95

## Wireless Handheld Remote

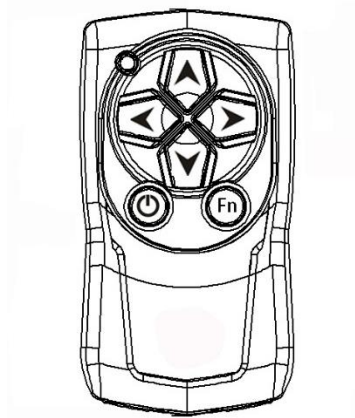

### OPERATION:

-Press on/off button to Power on or off searchlight.

-Change direction of the light beam by using the direction buttons.

Up = ▲      Down = ▼      Right = ►      Left = ◄

-Function (Fn) Button = Strobe Mode on or off

### HANDHELD WIRELESS REMOTE PROGRAMMING:

1. Switch off DC Power or disconnect from battery.
2. Make sure there is NO other transmitter operating at the same time.
3. Switch on DC power, within 5 seconds press remote up ▲ and down ▼ button once simultaneously.
4. Searchlight will flash to acknowledge the remote. Connection has been made.
5. Up to 4 remotes may be used with the searchlight (programming a fifth remote will replace the first). To program a second remote, within five seconds of programming the first remote, press the second remote's up and down button once simultaneously. Repeat to program additional remotes.

